

Sony LH51 display with RS-232 option

The RS-232 display unit will come with a foot switch or print button and a 25 pin or 9 pin connector to hook up to your computer.



The default setting is
9600, N, 8, 2

25 pin connector pin out:

- #3 : Tx data
- #7 : GND
- #4, #5 : jumped together
- #6, #8, #20 : jumped together

9 pin connector:

- #2 : transmit
- #3 : receive
- #7 : GND
- #7, #8 : jumped together
- #1, #4, #6 : jumped together

Carl Staehle Corporation

1840 Industrial Drive, Unit 320. Libertyville, IL 60048
IL Office: 847.573.8200 WI Office: 262.498.5704