 


# LH-70 Display Calibration


---

You will have to enter the setup mode and enter a 3 digit number for linear calibration. For rule of thumb the maximum value you can enter is 600 (this stands for microns)  $.000039 = 1 \text{ um}$  then  $600 \times .000039$  is the largest value you can add or subtract.

**Set Up**



**Enter**

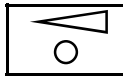

**3** **0** **3**

**Enter**

**Set Up**

Push to enter setup mode

Axis Select Key (text will say Lin err)

Pick the axis to calibrate X, Y or Z

Enter the 3 digit value

This will save the 3 digit value

Push to exit set up mode

Carl Staehle Corp. 847-573-8200